

FIG.3

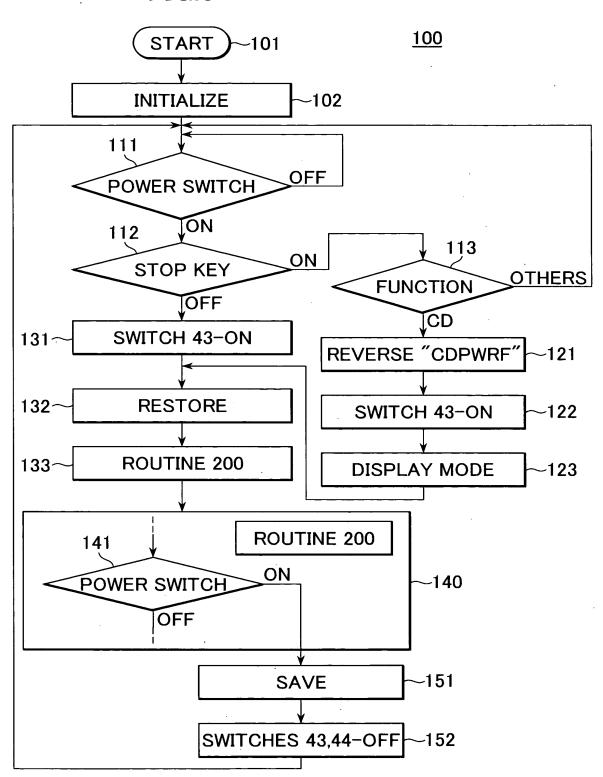


FIG.4

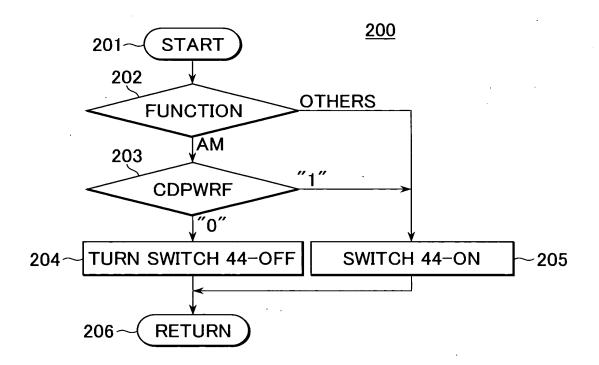


FIG.5

FUNCTION FLAG CDPWRF	BROADCAST RECEIVING	CD/CASSETE/ LINE INPUTS (MD)
″1″	ON	ON
<b>″</b> 0″	OFF	ON

POWER CONTROL OF CD PLAYER

